




**EDGE SANDER
MODEL G1072
INSTRUCTION MANUAL**

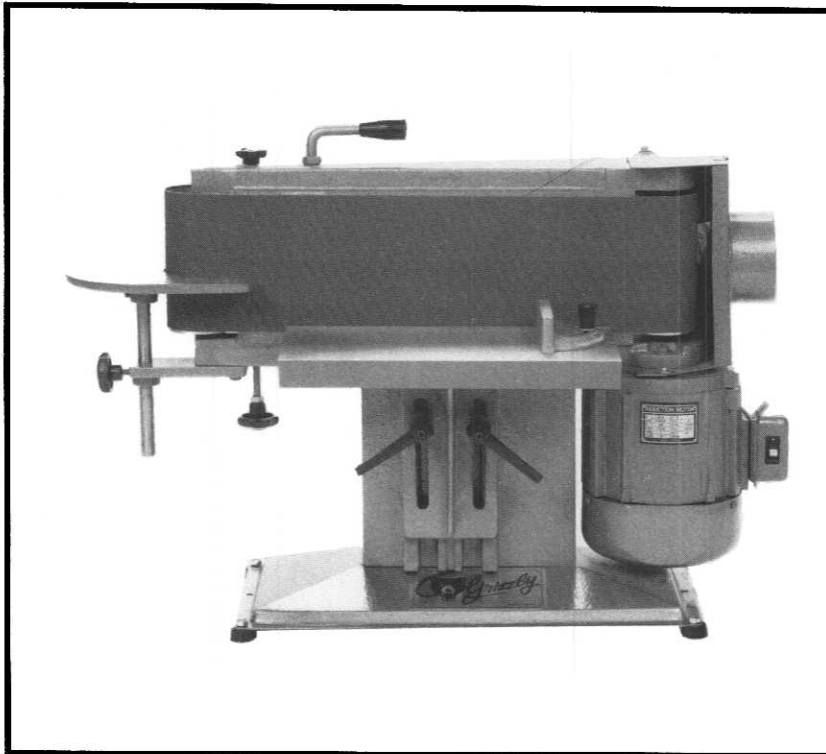

GRIZZLY IMPORTS, INC.

COPYRIGHT ©1993 BY GRIZZLY IMPORTS, INC.
WARNING: NO PORTION OF THIS MANUAL MAY BE REPRODUCED IN ANY
SHAPE OR FORM WITHOUT THE WRITTEN APPROVAL OF GRIZZLY IMPORTS, INC.
PRINTED IN USA, JANUARY 1993

XV. PARTS LIST

Ref. No.	Part No.	Description
1	P1072001	End Cap
2	PR03M	Retaining Ring 12 mm
3	P6201	Bearing
4	P1072004	Drive Roller Shaft
5	G1215	Sanding Belt 6" x 48"
6	P6201	Bearing
7	PB03	Hex Bolt $\frac{5}{16}$ " - 18 x 1"
8	PB09	Hex Bolt $\frac{5}{16}$ " - 18 x $\frac{1}{2}$ "
9	PW07	Flat Washer $\frac{5}{16}$ "
10	PSS18	Setscrew $\frac{5}{16}$ " - 18 x $\frac{3}{4}$ "
11	P1072011	Drive Roller
12	P1072012	Bushing
13	P1072013	Motor
14	P1072014	Power cord
15	P1072015	Key
16	PS01	Ph. Hd. Screw #10-24 x $\frac{1}{2}$ "
17	P1072017	Switch
18	P1072018	Main Table Column
19	P1072019	Base
20	P1072020	Main Table Support
21	P1072021	Table Support Lever
22	P1072022	Lower Adjustment Knob
23	PN02	Hex Nut $\frac{5}{16}$ " - 18
24	P1072024	Rubber Foot
25	P1072025	Dust Hood
26	P1072026	Platen Casting
27	P1072027	Lever Knob
28	P1072028	Belt Tension Lever
29	P1072029	Cam
30	P1072030	Upper Adjustment Knob
31	P1072031	Tension Adjustment Sleeve
32	P1072032	Spring
33	PN05	Hex Nut $\frac{1}{4}$ " - 20
34	PLW02	Lock Washer $\frac{1}{4}$ "
36	P1072036	Tension Adjustment Shaft
37	P1072037	Auxiliary Table
38	P1072038	Auxiliary Table Post
39	P1072039	Aux. Table Support Plate
40	P1072040	Locking Knob
41	P1072041	Miter Gauge Lock Knob
42	PW06	Washer $\frac{1}{4}$ "
43	P1072043	Miter Gauge
44	P1072044	Main Table
45	P1072045	Idler Roller Shaft
46	P1072046	Idler Roller
47	PSS24	Setscrew $\frac{3}{16}$ " - 32 x $\frac{3}{16}$ "
48	PW07	Flat Washer $\frac{5}{16}$ "
49	P1072049	Graphite Pad
50	PB03	Hex Bolt $\frac{5}{16}$ " - 18 x 1"
51	PW07	Flat Washer $\frac{5}{16}$ "

XVI. PARTS DIAGRAM

