



PARTS LIST - RATCHET HOIST

Ref. #	Description
001	Gear Case Assembly
002	Disk Gear Assembly
003	Drive Shaft
004	Splined Gear
005	Gear Side Plate Assembly
006	Load Sheave
007	Guide Plate
008	Roller
009	Bearing Race
010	Stripper
011	Lever Side Plate Assembly
012	Pawl Spring
013	Pawl
014	Snap Ring
015	Disk Hub
016	Free Spring
017	Friction Disk
018	Ratchet Disk
019	Threaded Disk
020	Brake Cover Assembly
021	Changeover Gear
022	Lever Handle Assembly
023	Changeover Pawl
024	Spring Seat
025	Changeover Spring

Ref. #	Description
026	Bushing
027	Hand Wheel
028	Load Chain
029	Chain Ring
030	Name Plate
031	Top Hook Assembly
032	Top Hook Shaft
033	Bottom Hook Assembly
034	Chain Pin
035	Hex Nut
036	Lock Washer
037	Hex Nut
038	Lock Washer
039	Screw
040	Castle Nut
041	Split Pin
042	Castle Nut
043	Split Pin
044	Screw
045	Lock Washer
046	Rivet
047	Snap Ring