


# H6193 Parts Breakdown and List

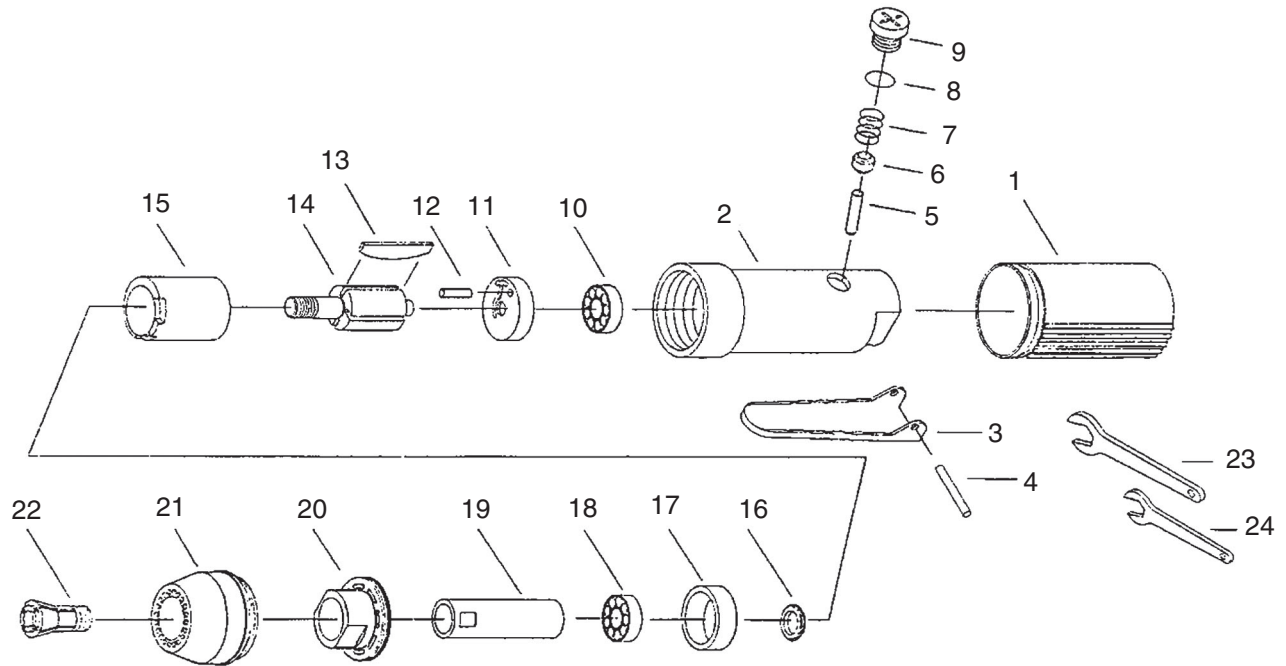

REF	PART #	DESCRIPTION
1	PH6193001	HOUSING COVER
2	PH6193002	HOUSING
3	PH6193003	THROTTLE LEVER
4	PH6193004	LEVER PIN
5	PH6193005	VALVE PIN
6	PH6193006	VALVE
7	PH6193007	COMPRESSION SPRING
8	PH6193008	O-RING
9	PH6193009	VALVE CAP
10	PH6193010	BALL BEARING
11	PH6193011	REAR END PLATE
12	PH6193012	PIN

REF	PART #	DESCRIPTION
13	PH6193013	ROTOR BLADE
14	PH6193014	ROTOR
15	PH6193015	CYLINDER
16	PH6193016	BEARING SPACER
17	PH6193017	FRONT END PLATE
18	PH6193018	BEARING
19	PH6193019	SPINDLE
20	PH6193020	RETAINER
21	PH6193021	HOUSING CAP
22	PH6193022	COLLET
23	PH6193023	WRENCH 12MM
24	PH6193024	WRENCH 11MM