


MAINTENANCE

1. Wipe all dirt and dust off the press
2. Apply light oil to the surface of the ram.
3. Check hoses, pressure head, and support rods for cracks or damage. Replace if necessary.
4. Remove the plug on the back of the hydraulic jack to check the oil level. Add oil if necessary, replace the plug, then pump the handle several times with the pressure release valve open to bleed the air out of the system.

If you need additional help with this procedure, call our service department at: (570) 546-9663.



PARTS

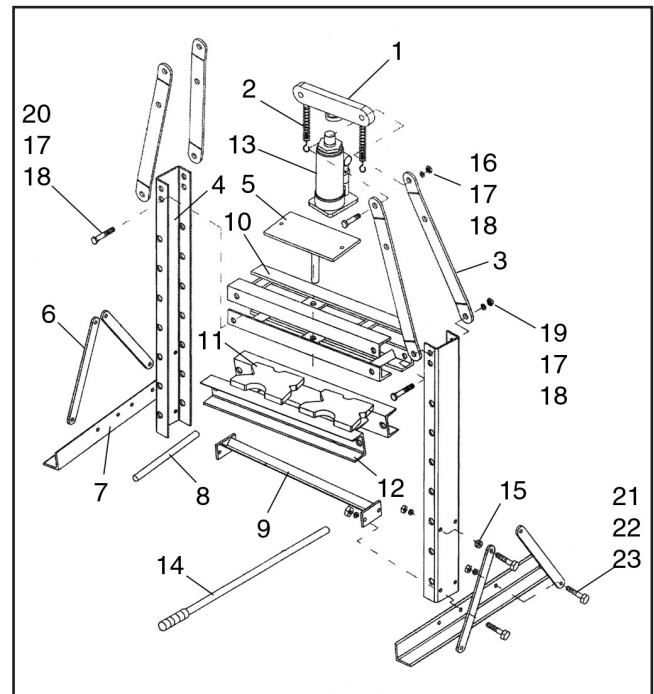

| REF | PART # | DESCRIPTION |
|-----|-----------|-----------------------|
| 1 | PH6229001 | HEADER |
| 2 | PH6229002 | SPRING |
| 3 | PH6229003 | HEADER SUPPORT |
| 4 | PH6229004 | UPRIGHTS |
| 5 | PH6229005 | JACK PLATE |
| 6 | PH6229006 | ANGLE BRACES |
| 7 | PH6229007 | BASE SUPPORT |
| 8 | PH6229008 | SUPPORT ROD |
| 9 | PH6229009 | SPREADER |
| 10 | PH6229010 | CROSSBEAM |
| 11 | PH6229011 | TABLE PLATES |
| 12 | PH6229012 | TABLE |
| 13 | PH6229013 | HYDRAULIC JACK |
| 14 | PH6229014 | JACK HANDLE |
| 15 | PH6229015 | SPACER 8MM |
| 16 | PB129M | HEX BOLT M14-2 X 45 |
| 17 | PW10M | FLAT WASHER 14MM |
| 18 | PN32M | HEX NUT M14-2 |
| 19 | PB99M | HEX BOLT M14-2 X 110 |
| 20 | PB130M | HEX BOLT M14-2 X 95 |
| 21 | PB07M | HEX BOLT M8-1.25 X 25 |
| 22 | PLW05M | LOCK WASHER 8MM |
| 23 | PN03M | HEX NUT M8-1.25 |

