


PARTS BREAKDOWN

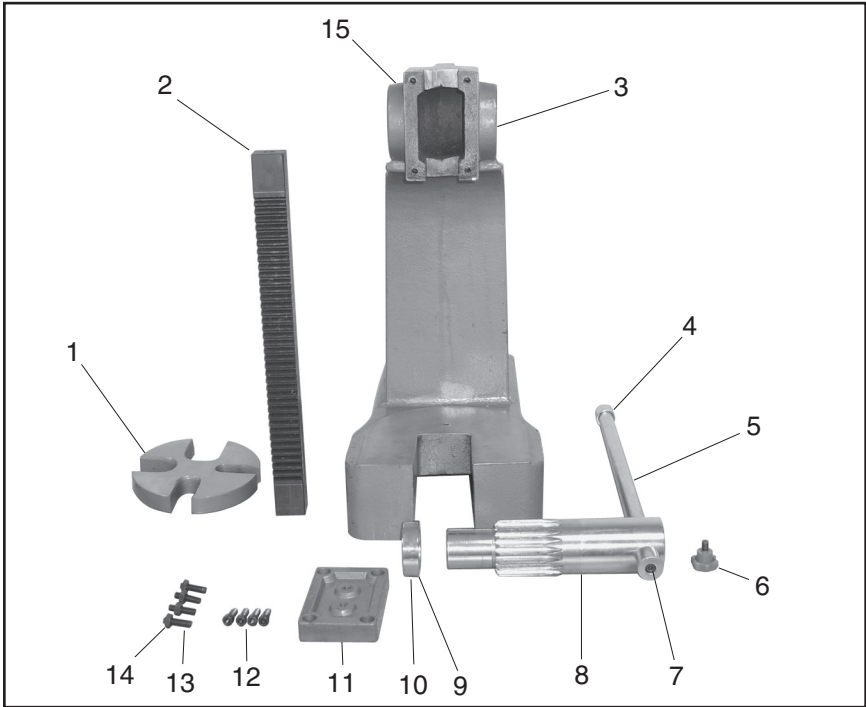

H7830 Parts List

REF	PART #	DESCRIPTION
1	PH7830001	TABLE
2	PH7830002	RAM
3	PH7830003	CAST FRAME
4	PH7830004	HANDLE CAP
5	PH7830005	SLIDING HANDLE
6	PH7830006	LOCK KNOB M8-1.25 X 12
7	PSB02M	CAP SCREW M6-1 X 20
8	PH7830008	PINION
9	PH7830009	LOCK COLLAR
10	PSS20M	SET SCREW M8-1.25 X 8
11	PH7830011	RAM SUPPORT PLATE
12	PB26M	HEX BOLT M8-1.25 X 30
13	PSS19M	SET SCREW M8-1.25 X 30
14	PN03M	HEX NUT M8-1.25
15	PH7830015	OIL FITTING 6MM

H7831 Parts List

REF	PART #	DESCRIPTION
1	PH7830001	TABLE
2	PH7831002	RAM
3	PH7831003	CAST FRAME
4	PH7831004	HANDLE CAP
5	PH7831005	SLIDING HANDLE
6	PH7830006	LOCK KNOB M8-1.25 X 12
7	PSB02M	CAP SCREW M6-1 X 20
8	PH7831008	PINION
9	PH7831009	LOCK COLLAR
10	PSS20M	SET SCREW M8-1.25 X 8
11	PH7831011	RAM SUPPORT PLATE
12	PSB14M	CAP SCREW M8-1.25 X 20
13	PSS19M	SET SCREW M8-1.25 X 30
14	PN03M	HEX NUT M8-1.25
15	PH7830015	OIL FITTING 6MM